# 登车桥动力单元<mark>5</mark> POWER UNITS FOR DOCK LEVELER 5



## 简介 General Description

本液压动力单元集成了高压齿轮泵、电机、液压阀、油箱等液压元件,用于主甲板需要中位停止的登车桥的控制,而保护溢流阀使得主板在一定负载条件下能够浮动,有效实现在装货和卸货时对登车桥的保护。


This hydraulic power pack integrates the gear pump, AC motor, multifuctional manifold, cartridge

valves, tank as well as the hydraulic accessories. It offers an efficient, reliable control for the up and down movements of the ramp and lip of a dock leveler. The 2nd relief valve ensures the main platform to be floating under load when the dock leveler is being used for loading and unloading the goods, thus protecting the dock leveler effectively.





## 系统工作原理


# Hydraulic Circuit Diagram

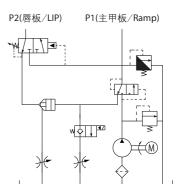


#### 外形尺寸图 Outline Dimension

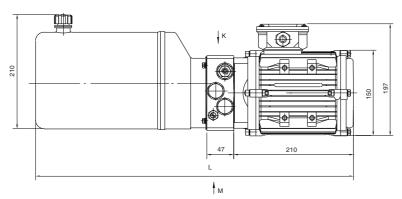

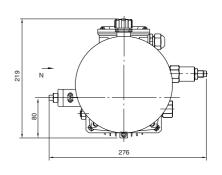

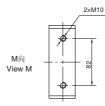

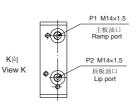



### 型号规格说明 Model Specifications

Model 型 号	Motor Volt 电机电压	Motor power 电机功率	Displacement 油泵排量	System pressure 溢流阀压力	Tank Capacity 油箱容量	L
YBZ-E2.1B4E82/1	380VAC	0.75KW	2.1mL/r	16MPa	- 6L	557mm
YBZ-E2.7B4E82/1			2.7mL/r	14MPa		

- 说 明: 1.如需不同流量的泵、压力、电机功率等系统参数,请查看液压动力单元型号说明。
  - 2.如需手动应急装置,请在订货时说明。
  - 3.如需订购 CSA 或 UL 认证, 60HZ 的动力单元,请在订购时说明。
- Remark: 1. Please go to page 38 or consult our sales engineer for the different pump displacement, motor power or tank capacity.
  - The manual override function is available on request.
  - 3. 60HZ motors with CSA or UL certification are available upon request.

## 注意事项 Special Notes

- 1. 此动力单元不可连续运转(1分钟ON,9分钟OFF),可重复工作。
- 2. 按装前必须保证油缸、油管、接头等液压元件清洁无任何杂质粘附。
- 3. 液压油粘度应为15~68CST,应清洁无杂质,推荐使用N46号液压油。
- 4. 首次启动运行系统后,应立即检查油箱中的油量是否充足。
- 5. 系统使用第一个100小时后,应更换液压油,以后每3000小时更换一次液压油。
- 1. The power unit is of S3 duty, which can only be worked intermittently, ie.,  $1 \mbox{minute}$  on and 9 minutes off.
- Clean all the hydraulic parts concerned before mounting the power unit.
- 3. Viscosity of the hydraulic oil shoud be 15~68 cst, which should also be clean and free of impurities.N46 hydraulic oil is recommended.
- 4. Check the oil level in the tank after the initial operation of the power unit.
- 5. Oil changing is required after the initial 100 operation hours, afterwards once every 3000 hours.